SelecTile / Freestyle – ESD Grounding Kit – Installation Instructions

(No Adhesive or Copper Strips Required)

Corner piece of floor tile

5/16" Hole
completed in field

#10 wire with
Ring Terminal

1/4-20 four point T-Nut
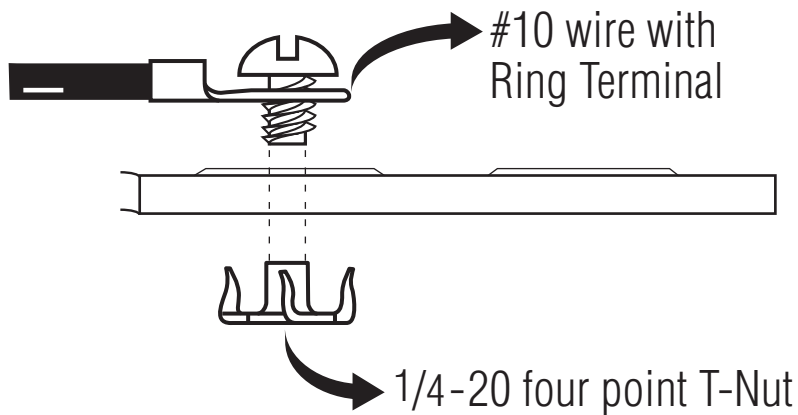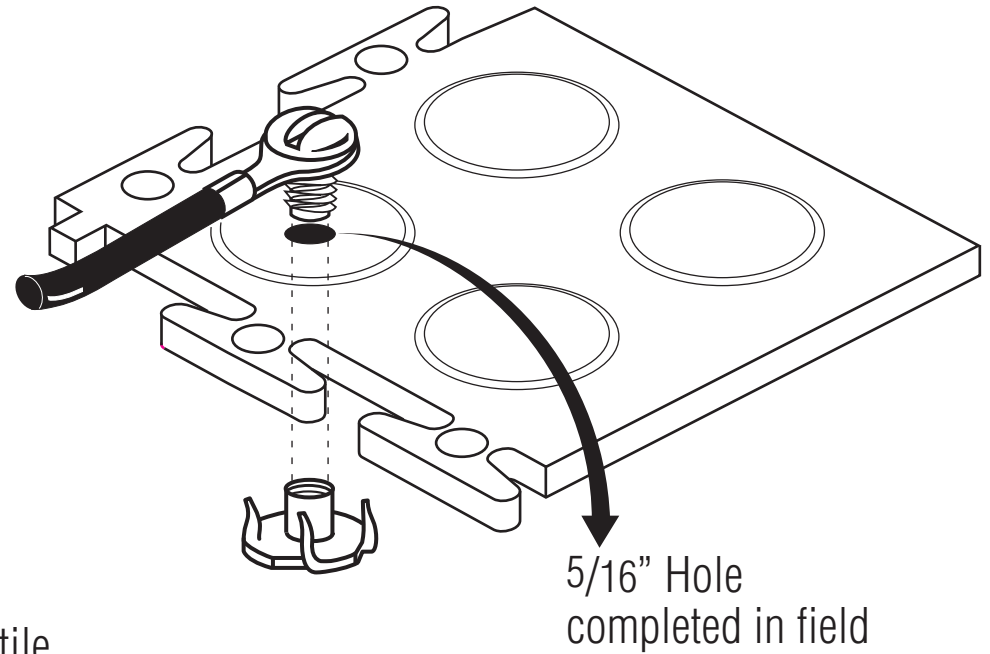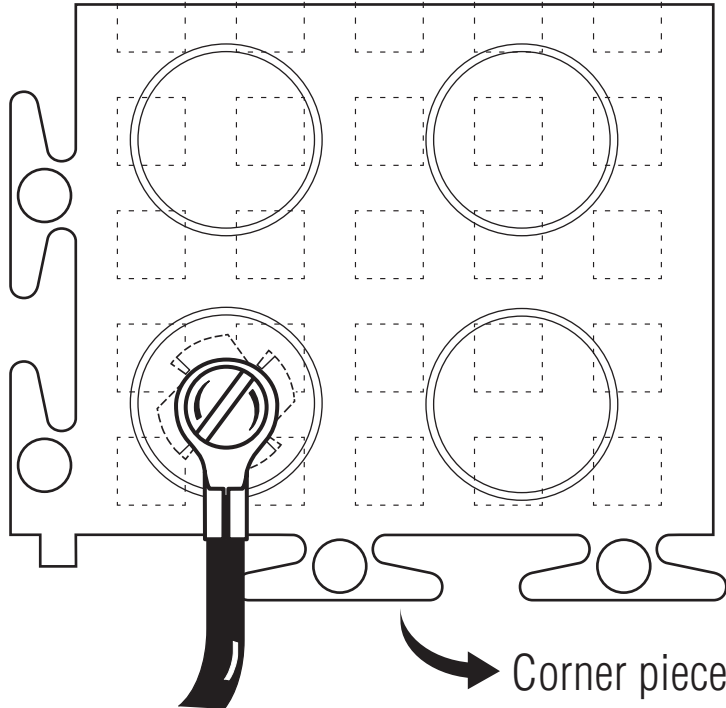
NOTE: Illustration shows installation in SelecTile Coin Top. Follow same procedure for SelecTile Flat and FreeStyle ESD Products.